



USER'S MANUAL

**Electronic Piano Keyboard
MU10075US**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

WARNING

Attention: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

WARNING:
CHOKING HAZARD-Small parts.
 Not for children under 3 years.

General Warnings:

- △ The product must be installed and used under the supervision of an adult.
- △ Read through each step carefully and follow the proper order.
- △ Remove all packaging, separate and count all parts and hardware.
- △ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- △ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- △ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

Thank you for purchasing our Multifunctional Electronic Keyboard with a strong expressive force and a beautiful appearance. It will provide you an easy way to learn and play the keyboard. This keyboard is not only a perfect musical instrument for beginner, but also an ideal instrument in musical education as well as for entertainment.

Please read the guide carefully before you use and keep it for reference.

Feature functions

- ※61 keys piano style keyboard/ Lighting keys
- ※LCD display/ 510 timbres/ 300 rhythms
- ※With USB music player
- ※USB player volume control/ Pre & next selection/ AB reread/ Play mode/EQ mode/ Start/ Stop/ Silent mode
- ※Audio input (phone audio can be input to the piano)
- ※61 keyboard percussions/ 30 demos/ 2 teaching modes
- ※Master volume control/ Accompaniment volume control/ Transposition control/ Tempo control
- ※ Sustain / Vibrato / Metro/ Split/ Record / Program / play/ Demo one/ Demo all
- ※Sync/ Start/ Stop/ Insert/ Single Finger & Multi-Finger chord/ Bass chord/ Chord off
- ※External power/ External earphones jack/ External microphone jack/ Line output/ Audio in


Note

- Use the power adapter that comes with the keyboard, or this may result in damage or overheating. If there are abnormal conditions(wire or plug damaged, no sound, strange smell or smoke suddenly during use, etc.), please turn off the power immediately, and contact relative technician.
- When the piano is not in use, please turn off the power and remove the plug to prevent internal components from being burnt.
- Keep plastic bags properly to prevent children from playing and suffocating.
- Keep surface clean and avoid objects falling into gaps of keyboard and keys; Wipe with a soft dry cloth; Keep it dry and avoid long-term exposure in strong sunlight.
- Please move the keyboard very carefully and lightly, to avoid damage of plastic parts and internal electronic components.
- Please keep keyboard away from acidic, alkaline and poisonous substances to avoid poor contact.
- Keyboard is precision instrument. Any modification may cause a malfunction. If there is any failure, please contact with relative technician immediately and do not replace the component by yourself.

I.Instructions for panel control and external jack


● **Panel control button**

1.Power on/off	Music player control	18.Timbres	30.Percussion
2.Master volume	9.Volume down	19.Lighting keys	31.Split
3.Tempo	10.Volume up	20.Rhythms	32.Sustain
4.Accompaniment volume	11.EQ mode	21.Numeric panel	33.Vibrato
5.Transpose	12.Previous song	22.Start/Stop	34.Teaching 1
6.Program	13.Play/Pause	24.Sync	35.Teaching 2
7.Record	14.Next song	25.Single finger chord	36.Demo one
8.Play	15.Reread	26.Multi-finger chord	37.Demo all
	16.Play mode	27.Bass chord	38.Metro
	17.Silent mode	28.Chord off	39.USB jack
		29.8 panel percussion	

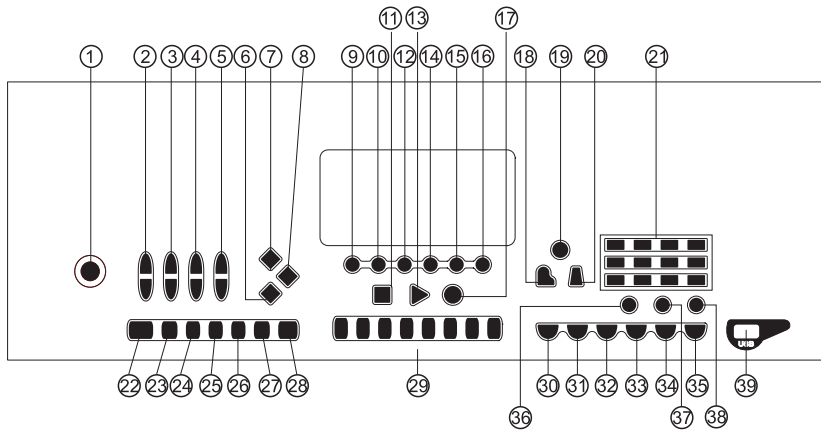

● **Backside external jack**

 - 40.Audio input
- 41.MIC
- 42.Line out
- 43.PHONES
- 44.DC12V

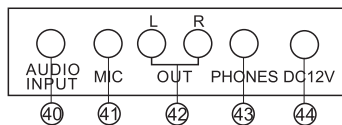

II.Preparation before performance

● **Power supply**

Battery

Battery jar is in the backside of the keyboard. Please make sure that the batteries are inserted correctly. When the battery power runs out, the keyboard will not pronounce or the tone will be distorted. Please replace a new set of batteries. Please remove batteries when not in use for a long time.

AC adapter

You must use the adapter packed with this keyboard. Please note that the input voltage must be the same as the mains voltage when using the power adapter! ! Unplug the AC plug when you are not using the keyboard.

● **External jack use**

AUDIO INPUT: This keyboard has stereo audio input function, which support audio signals playing from mobile phones, music players, and computers to the keyboard.

First turn off the power, then connect the audio device and AUDIO INPUT jack by audio cable, and then turn on the power.

MIC: Insert the microphone plug into the MIC jack to sing.

LINE OUT: Connect this jack with other audio equipment to get more powerful play effect.

PHONES OUTPUT: Insert the earphone plug into the PHONES OUTPUT Jack to avoid affecting others during personal practice.

III.Functional operation

Pressing the [Power] switch, the LCD screen will illuminate and the keyboard is on working.

1.Timbres selection

Pressing [Timbres] button to enter timbres selection mode, and choose the timbre you need by numeric panel. Under chord mode, the 19 keys on the left of the keyboard are chord tones, instead of corresponding tones.

2.Lighting keys

This keyboard has the function of lighting keys. Keys will be illuminated under playing, teaching function and demos. The system default is Lighting on.

Pressing [Lighting] button to turn off/on.

3.Sustain & Vibrato

Sustain: automatic extension of the end of a note played

Vibrato: the pitch of a note quivers in a small range

Sustain and Vibrato are only effective for playing mode.

4.Automatic accompaniment function

Rhythms selection: Pressing [Rhythms] button to enter rhythms selection mode, and choose the rhythms you need by numeric panel. Pressing [Start/Stop] button to stop.

Accompaniment selection: It can be divided into single- finger chord and multi-finger chord. Without rhythm playing, the chord will be manual chord playing. With rhythm playing, the chord will be automatic chord of the corresponding rhythm.

Single- finger chord: Pressing [Single finger] button to turn on/off.

See below single finger chord playing:

Major triad: Root playing

Minor triad: Pressing root and one black key on its left at the same time

Dominant 7th: Pressing root and one white key on its left at the same time

Minor seventh chord: Pressing root and one white key and one black key on its left at the same time

Multi-fingered chord: Pressing [Multi finger] button to turn on/off.

See below single finger chord playing:

Chord Type	Chord Playing
C	1, 3, 5
Cm	1, b3, 5
C7	1, 3, (5),b7
Cm7	1, b3, (5),b7

Under rhythm playing mode, turn on single finger or multi-finger chord, and the corresponding accompaniment will be added automatically when playing chord. Turn off single finger or multi finger or chord off, the accompaniment will stop, but the rhythm will continue.

If pressing [Chord off] button, chord functions or accompaniment are off. All keys will back to normal.

Chord timbres selection: Pressing [Bass chord] to change chord timbres.

Automatic accompaniment control

Under rhythm playing, pressing [Insert] button to insert a interlude. Keep pressing [Insert] button can replay this interlude.

Sync: Pressing [Sync] button to enter sync function. The automatic rhythm or accompaniment starts when pressing keys in accompaniment area for the first time. Pressing this key during the rhythm will stop the rhythm and enter the synchronization state.

Tempo: [Tempo] button is effective for demos and rhythms. Pressing [+][-] at the same time to enter the default speed.

5.Volume control

Master volume control: The default volume is level 4. Pressing [+][-] to adjust.

Accompaniment volume control: The default volume for chord and percussion is level 6. 8 levels in total. Pressing [+][-] to adjust.

6.Percussion

There are 61 percussion. Pressing [Timbres] button, then typing 128, the keyboard will convert into keyboard percussion keys. Each key corresponds to a percussion instrument.

7.Metro

Pressing [Metro] button to start the metronome. The metronome effect will

be added when playing. Continuous pressing are : 1/4 beat 2/4 beat; 3/4 beat; 4/4 beat: stop.

8.Split

Pressing [Split] button, 61 black and white keys are divided into two keyboard areas. Then 24 keys on the left are separated from the original keyboard, which the pitch raised 8 degrees, and keep original timbre.

The pitch of the right part decreases 8 degrees, which is consistent with the left one. The right part timbres can be selected as required, and the left and right part can play different timbres at the same time.

9.Transposition control

Pressing [Transpose +] or [Transpose -] to change the playing method, which the entire keyboard pitch change in semitones. The adjustment range is between "+6" and "-6".

10.Record

Maximum 45 notes.

Pressing [Record] button to enter the recording mode. Under recording mode, pressing keys to record notes. Chord and percussion cannot be recorded when full and notes recorded will not be affected.

Pressing [Play] button to play recorded notes successively. Pressing again to stop.

Under recording mode, pressing [Record] or [Stop] button to exit recording function.

11.Program

Maximum 32 percussions can be edited.

Pressing [Program] button to enter program mode. Under the program mode, pressing the keys to edit drum sounds (percussion). Percussions can't be programmed when it's full. After finishing programming, pressing [PLAY] button to play percussion successively. Pressing again to stop.

Under program mode, pressing [Program] or [Stop] button to exit program function.

12. Demos

Demo one: Pressing [Demo one] button to repeat a single song. Pressing again or [Start/Stop] button to exit.

Demo all: Pressing [Demo all] button to repeat all demo songs. Pressing again or [Start/Stop] button to exit.

Under demos playing mode, you can select the corresponding song by numeric panel or [+/-] numeric panel.

13. Teaching mode & lighting keys

Teaching 1: Pressing [Teaching 1] button to enter teaching mode. You can select the demo you want by numeric panel or [+/-] numeric panel.

This teaching mode refers to learning about demo duration, and does not require the pitch and accuracy. You are allowed to play wrong while the keyboard is still playing with the correct notes, and the correct note will be displayed on the screen. After learning a song, the current song will be automatically repeated.

Pressing again or [Start/Stop] button to exit.

Teaching 2: Pressing [Teaching 2] button to enter teaching mode. You can select the demo you want by numeric panel or [+/-] numeric panel.

This teaching mode refers to learning to follow the correct notes. You can play according to the demo song. Keys light up according to the main melody note. It prompts the currently played note. Follow the instructions of the lighting key to play correctly. You can also learn based on the note key values displayed on the screen. The song will continue to play until you play the corresponding note, otherwise, it will wait until you pop the correct note. In this state, only the correct notes on the keys are played, and there is no response when the wrong keys are played. Pressing again or [Start/Stop] button to exit.

510 TIMBRES

International standard tone	063 Light Click Organ	127 Soundtrack	190 Sine solo
000 Pinao	064 Crystal Xylophone	Electronic music	191 Sine solo2
001 Vibraphone	065 Stereo Reed Organ	128 Percussion	192 Folk Guitar
002 Church Organ	066 Jazz Organ	129 Church Organ	193 Classic Organ
003 Reed Organ	067 Bright Clean Guitar	130 For the keyboard	194 Finger Bass
004 Electric Guitar (jazz)	068 Electric guitar	131 Church Piano	195 Aco. Bass
005 Electric Guitar (muted)	069 Rhythm Guitar	132 Piano PAD	196 Clean Bass
006 Electric Bass (finger)	070 Heavy Metal Guitar	133 Double Bass	197 Banjo
007 Synth Bass 2	071 Pick Guitar	134 Light rhythm Piano	198 Octave Gtr
008 Violin	072 Psychedelic Guitar	135 Synthesis Nylon Guitar	199 Distortion Gtr
009 Orchestral Harp	073 Crystal String	136 Guitar organ	200 Pick Bass
010 String Ensemble 1	074 Magic Guitar	137 Electric Piano Pad	201 Folk shtring
011 Soprano Sax	075 Electric Guitar (muted)	138 Bright Violin	202 Fretless
012 Clarinet	076 Electronic Pad	139 Psychedelic Organ	203 Folk Harmonica
013 Flute	077 Electronic dance Pad	140 Electronic Bagpipe	204 English Horn
014 Lead 1 (square)	078 Metal Sci-fi Pad	141 Wind Bagpipe	205 Synth? Bass?1
015 Banjo	079 Sci-fi Pad	142 Double Kalimba	206 Synth? Bass?2
016 Crystal FX	Electronic Symphony	143 Fifths Lead	207 Synth? Bass?3
017 Rotary Organ	080 Electronic FX	144 Western Pad	Modern Electric
018 String	081 Lyric Organ	145 Wind Bagpipe	208 Crystal Gtr
019 Sift Crystal	082 Clean Shamisen	146 High Bagpipe	209 Jazz Organ
020 Koto FX	083 Synth shanai	147 Bright Guita	210 Country Harmonica
021 Reed Organ	084 Synth kalimba	148 (Bass- Lead)	211 Honky Tonk
022 Drawbar Organ Detuned	085 Crysta kalimba	149 Water jean	212 Honky Gtr
023 Drawbar Organ Stereo	086 Synth kalimba	150 Rock Electric Bass	213 Custom guitar
024 Digital piano	087 Magic shanai	151 Rhythm Electric Bass	214 Santur
025 The Strings	088 Baritone Kalimba	152 Psychedelic Bass	215 12 String Gtr
026 Sweet Harmonica	089 Electronic String	153 Atonic violin	216 Jazz boy
027 Synth Strings	090 Magic Square	154 Muted Bass	217 Mute Gtr1
028 Choir Aahs	091 Lyric Electronic	155 Bass Pad	218 Detuned Strings
029 Square Lead	092 Diplophonia Square	156 Chord Horn	219 Detuned Harmonica
030 Atmosphere	093 Electronic dance Guitar	157 Chord piano	220 Detune Nylon Gtr
031 Sin Marimba	094 Interactive Lead	158 Chorus Guitar	221 Mute Gtr 2
032 Bright Crystal	095 Aluminium jean	159 Santur	222 Velocity Gtr
033 Lyric Crystal	096 Bright Sitar	160 Purple Org	223 Steel Gtr1
034 Reed Organ	097 Diplophoniakote	161 Click Organ	224 Steel Gtr 2
035 Electronic Crystal	098 Orchestra Organ	162 Bright Draw	225 Tango Accordion
036 Sweet Crystal	099 Environmental Lead	163 Hyper Times	226 Detune Accordion
037 Psychedelic Synth Lead	100 Glockenspiel Lead	164 Funk EP	227 Detuned Steel Gtr
038 Goblins	101 Bass Lead	165 Cool! ?Galaxy EP	228 Velocity Steel Gtr
039 Psychedelic electronic	102 Electric Bass Pad	166 Theater? Organ	229 Velocity Steel Gtr (Fx)
040 Clean piano	103 Atmosphere Lead	167 Clavi	230 Velocity Pedal Steel Gtr
041 Electronic Organ	104 Clean guitar Pad	168 Venasi Ep	231 Chorus Steel Gtr
042 Magic electronic	105 String Lead	169 Tremolo Strs	232 Mellow Gtr
043 Guitar Organ	106 Sharp Lead	170 Harpsichord	233 Legato Strings
044 Electric Piano Pad	107 Soft Lead	171 Slow Strings	234 Mellow Harmonica
045 Crystal Guitar	108 Atmosphere Pad	172 Syn Strings 1	235 Clean Harmonica
046 Pick Organ	109 Sawtooth Lead 1	173 Pizz Strings	236 Clean Jazz Gtr
047 Metal Piano	110 Sawtooth Lead 2	174 CP80	237 Detuned Gtr
048 Metal Crystal	111 Sawtooth Lead 3	175 Atonic Marimba	238 Velocity Jazz Gtr
049 Piano PAD	112 Soft electric piano	Synthetic electronic	239 Crystal piano
Western electronic	113 Accordion	176 Synth strings 1	240 Crystal music
050 Synth Accordion	114 Chorus Accordion	177 String Ensemble	241 Synth Organ
051 Bright Accordion	115 Mute Guitar	178 Traditional? Accordion	242 Synth Bass
052 Psychedelic Organ	116 Funk Guitar	179 Synth Strings 2	243 Light rhythm Bass
053 Koto Lead	117 Jazz Guitar	180 12 Strings? Guitar	244 Bright Bass
054 Light rhythm Organ	118 Chorus Clean Guitar	181 Pipe Organ	245 Synth marimba
055 Synth Organ	119 Mellow Drawbar Organ	182 Lead 1 (charang)	246 Electric Guitar Pad
056 Rock Organ	120 Mellow Guitar	183 Lead 2 (fifths)	247 Distortion Guitar pad
057 Chruch Organ 1	121 Newage	184 Lead 3	248 Melody guitar
058 Chruch Organ 2	122 60? Drawbar Organ	185 Lead 4 (bass+lead)	249 New Strings
059 Soprano Organ	123 Warm	186 Chamber Strs	250 Synth Electric 1
060 Solw Organ	124 Polysynth	187 Lead 5 (chiff lead)	251 Synth Electric 2
061 Percussive Organ 1	125 Halo	188 Pad 6 (bowed)	252 Synth Electric 3
062 Thick Square	126 Rain	189 Lead 7 (caliope lead)	253 Synth Crystal

254 Synth Vib	318 Wooden Banjo	381 Electronic dance Pad	445 Electronic String Ensemble
255 Stereo Marimba	319 Wooden Crystal FX	382 Double Kalimba	446 Diplophonia Koto
256 Stero Muted Gtr	Hit Synthesizer	383 Electronic Crystal	447 Environmental Lead
257 Stero Organ	320 Hit Pinao	384 Rhythm electric Piano	448 Light rhythm Piano
258 An electric guitar	321 Hit Church Organ	385 Marimba Harp	449 Crystal Kalimba
259 Bright clean Guitar	322 Hit Reed Organ	386 Soft Pad n	450 Fierce Organ
260 Harpsichord	323 Hit Guitar jazz	387 Rhythm Electric Guitar	451 Soft Pad
561 Guitar organ	324 Hit guitar muted	388 Fierce Organ	452 Bright Rhythm
262 Velocity piano	325 Hit Bass finger	389 The Bass band	453 Crystal guitar
263 Pick Bass 1	326 Hit Synth Bass	390 The Bass strings	454 Interactive Lead
264 Pick Bass 2	327 Hit Violin	455 Heavy bass orchestra	456 Bright Violin
265 Psychedelic Synth strings	328 Hit. Orchestral Harp	392 Pizzicato Violin	457 Orchestra Lead
266 Metallic Crystal	329 Hit String Ensemble	393 Baritone Synth Contrabass	458 Hit Soprano Sax
267 Psychedelic Synth Lead	330 Hit Soprano Sax	394 High Trumpet	459 Metal Sax
268 Vibraphone Synth Lead	331. Hit Clarinet	395 Synth French Horn	460 Bagpipes
269 Crystal FX	332. Hit Flute	396 Diplophonia English Horn	461 Magic Lead
270 Synth Shamisen	333 Hit Lead square	397 Psychedelic Synth Lead	462 Wooden Bells
271 Electronic Shamisen	334 Hit Banjo	398 Koto Lead	463 Atmosphere Lead
Classic Synthesizer	335 Hit FX	399 East Nation Pad	Asian synthetic
272 Clean Guitar Pad	336 Rock piano	400 Queerelectric Piano	464 Electric Piano Pad
273 Orchestral Lead	337 Baritone Celesta	401 Psychedelic electronic	465 Glockenspiel Lead
274 Glockenspiel Lead	338 Digital Organ	402 Electronic organ	466 Environmental Lead
275 Atmosphere Lead	339 Magic Guitar	403 Synth accordion	467 Wind Lead
276 Fifths Lead	340 Diplophonia Guitar	404 Psychedelic Guitar	468 Clean Guitar Pad
277 Double Celesta	341 Bright bass	405 Bright Clean Guitar	469 Atmosphere Lead
278 Double Xylophone	342 Magic bass	406 Rhythm Electric Bass	470 Electric Bass Pad
279 Crystal Xylophone	343 Fantasy violin	407 Trill violin	471 Metal Sci-fi Pad
280 Resonant Gtr	344 Fast Harp	408 Harp ensemble	472 East Nation Pad
281 Sweet Reed Organ	345 Fantasy strings	409 Cello Lead	473 Western Pad
282 Slow Harpsichord	346 Sax magic	410 Rhythm Trumpet	474 Bright Lead
283 Bass Marimba	347 Dynamic clarinet	411 Rhythm Trombone	475 Clarinet Pad
284 Celesta	348 Magic Piccolo	412 Bright English Horn	476 Flute Pad
285 Glockenl	349 Magic Lead	413 Vibraphone Synth Lead	477 Sci-fi Pad
286 Tubular bell	350 Banjo	414 Marimba Synth Lead	478 Banjo Pad
287 Overdriven? Guitar	351 Dynamic Crystal	415 Electronic FX	479 Electronic dance Pad
288 Classical Celesta	352 Dynamic piano	Digital? Synthesizer	480 Rhythm electric Piano
289 Classical Organ	353 Magic Metallophone	416 Classical piano	481 Synthetic Kalimba
290 Full Strings	354 Digital Organ	417 Electronic Piano Pad	482 Wind Bagpipe
291 Bauble Lead	355 Reggae Guitar	418 Pick organ	483 High Bagpipe
292 Aggradevole Gtr	356 Hawaii Guitar	419 Organ Guitar	484 Psychedelic Jazz Guitar
293 Slan Bass 1	357 The bass	420 Synth Electronic Guitar	485 Rhythm Electric Guitar
294 Slan Bass 2	358 National bass	421 Synthesis Nylon Guitar	486 Pan Flute Pad
295 Over Driven Gtr 1	359 Solo Violin	422 Atmosphere Pad Bass	487 Electronic wind Pad
296 Over Driven Gtr 2	360 Heavy rock Harp	423 Cello Lead	488 Magic Metallophone
297 Over Driven electric Strings	361 Jumping String Ensemble	424 Synth Harp	489 Classical Electronic
298 Slow Harmonic	362 Jump Sax	425 Large violin	490 Synth Shanai
299 Soft Clarinet	363 Distortion oboe	426 Synth Trumpet	491 Environmental Shanai
300 Banjo Pad	364 Digital flute	427 High Trombone	492 Electronic Bagpipe
301 Banjo Lead	365 Heavy Lead	428 Synth Trombone	493 Science Fiction Classic
302 Karimba Pad	366 Mechanical Banjo	429 Metal FX	494 Bright Kalimba
303 Shamisen Pad	367 Dynamic Crystal	430 Bright Koto	495 Special Echo FX
304 Wooden Vibraphone	Science fiction electronic string	431 Japan Synth	496 Rock Clavichord
305 Wooden Church Organ	368 Rock Clavichord	432 Clean Piano	497 Bright clavichord
306 Wooden Reed Organ	369 Heavy metal Glockenspiels	433 Baritone Xylophone	498 Church Organ
307 Wooden Guitar jazz	370 Clear Organ	434 Rhythm Accordion	499 Reed Organ
308 Wooden Guitar muted	371 Baritone Organ	435 Organ ensemble	500 Modern electric guitar
309 Wooden Bass finger	372 Campus Jazz Guitar	436 Bright Guitar	501 Bar electric guitar
310 Wooden Synth Bass	373 Hall electric guitar	437 Crystal guitar	502 Dynamic guitar
311. Wooden Violin	374 East bass	438 Heavy metal bass	503 Electric guitar reverb
312. Wooden Orchestral Harp	375 Jumping Cello	439 Heavy bass orchestra	504 Heavy rock Harp
313. Wooden String Ensemble	376 Jumping Harp	440 Harp ensemble	505 Heavy rock Viola
314. Wooden Soprano Sax	377 Magic ensemble	441 Orchestral keyboard	506 Solo synthesizer
315. Wooden Clarinet	378 Baritone Sax synthesizer	442 Trumpet Ensemble	507 Heavy rhythm Alto Sax
316. Wooden Flute	379 Electronic bar	443 Trombone Ensemble	508 Digital flute
317. Wooden Lead	380 Heavy metal flute	444 French Horn Ensemble	509 Heavy rock lead

300 RYTHMS

000Mambo	061ModernWaltz	120POPhouse	180SwingLation
00116-beat	062-075RHUMBA	121Hard Electronic music	181Modern Jazz
002Waltz	062EuropeRhumba	122Soft Bossanova	182POPS
003Rhumba	063hardRhumba	123Punk Cha Cha	183SlowBigBand
004Reggae	064mixReggae	124HeavyMetal16-beat	184Funk8Beat
005Rock	065LiederRhumba	125Trip-Hop16-beat	185Quickstep
006Slow-rock	066 JazzRhumba	126GangstaRap	186StridePiano
007Bossanova	067LiederBossanova	127Figure Electronic music	187Bolivia Mambo
008Disco	068SlowRhumba	128Slow-16-beat	188-201BEGUINE
009Tango	069MixRhumba	12916Beatshuffle 1	188varietyMambo
010Country	070LiederCountry	130RockLation	189LatinHouse
011Popse	071hardPopse	131Fusion	190BalladsBeguine
012Beguine	072mixBeguine	132-145 DISCO	191ClassicalBeguine
013Lation	073jazzLation	132ModernDisco	192VarietyReggae
014March-polka	074ballad-Rhumba	133LiederDisco	193AcidRock
015Samba	075FusionRhumba	134Merengue	194HardMarch-polka
016Swing	076-089REGGAE	135JazzDisco	195Pasillo
0178-beat	076HardSwing	136Schlager	196Beguinel
018Chacha	077Lieder8-beat	137DanceSchlager	197Beguine2
019Salsa	078Hardhouse	138Straightrock	198Jive
020-033Manbo	079BluegrassSalsa	139RapPop	199SoulBallad
020BrazilMambo	080SmoothMambo	140LatinFusion	200FolkDance
021POP8-beat	081Blues16-beat	081Bolero	201LyricLatin
022POP Mambo	082ModernPopse	142Trance	202GermanMarch
023SmoothCountry	083Reggae1	143GermanMarch	203-215LATIN
024POPReggae	084Reggae2	144DiscoSoul	203Modernhouse
025LiederMambo	085bluesReggae	145POPDisco	204Reggae2
026hard8-beat	086MixPunk	146-159TANGO	205SoftLation
027countryBossanova	087LiederPunk	146PolkaFox	206BigBand
028hardMambo	088 Trip-Hop	147Bachata	207Ballad
029bluegrassTango	089ClassicalSoul	148RussianChanson1	208MarchSpeed
030country southCountry	090-103ROCK	149RussianChanson2	209PopBallad
031LiederPopse	090ClassicalRock	150ModernTango	210PopBallad2
032bluegrassBeguine	091PubRock	151ArgentineCumbia	211Ragtime
033rockLation	092Rap-Rock	152Punta	212NEWORLNSR&R
034-04716Beat	093DetroitRock	153CubaTango	213India-West-Reggae
034SlowMarch-polka	094HardRock	154BrazilTango	214ConbrioRock
035Europe Samba	095InstrumentalRock	155Boogie-Woogie	215AcidJazz
036jazzSwing	096SpaceRock	156TechnoPop	216-229MARCH_POLPA
037 POP16-beat	097GlamRock	157Techno	216BigbandMarch-polka
038countryPopse	098ModernRock	158JazzTango	217AdultContemporary
039patternSalsa	099 AussieRock	159ShuffleRock1	218AlternativeDance
040mix16-beat	100PianoRock&Roll	160-173 COUNTRY	219AlternativeMetal
041Lieder16-beat	101KrautRock	160ShuffleRock2	220AlternativeRap
042Hard16-beat	102countryrock	161PopPolka	221AmericanPunk
043POP Rhumba	103IndieRock	162OldiesBallad	222AmericanTradRock
044jazzReggae	104-117SLOW_ROCK	163Bluegrass	223BigBeat
045Punk16-beat	104Rockabilly	164Oldies8Beat	224ConbrioSamba
046mixrock	10550'SRock	165Broadway	225Britpop
047patternBossanova	106Britpop	166Hawaiian	226BritishBlues
048-061Waltz	107hardRock	167BluesBallad	227BritishPsychedelica
048classicalWaltz	108ballad-rock	16816BeatBallad	228BritishMetal
049LiederWaltz	109SoftRock	169ClassicalCountry	229BritishTradRock
050NewWaltz	11060'SROCK	170House	230-243SAMBA
051VienneseWaltz	111Electronic music16-beat	171Banda	230ArenaRock
052PolishWaltz	112FigureBritishrock	172CountryShuffle1	231Brazil Samba
053FrenchWaltz	113livelyRock	173CountryShuffle2	232jazz Samba
054 JAZZWALTZ1	114RockBallad1	174-187POPS	233CollegeRock
055JazzWaltz2	115RockBallad2	174Salsa	234ComedyRock
056CHRISTMASWALTZ	116classicalmixrock	175MixPOP Rock	235ContemporaryCeltic
057PopWaltz	117countryslowrock	176ShuffleBoogie	236ContemporaryInstrumental
058RockWaltz	118-131BOSSANOVA	177Twist	237Dark Ambient
059ElegantWaltz	118countryPunk	178JazzMarch-polka	238DeathMetal/BlackMetal
060COUNTRYWALTZ	119mixHipHop	179Malfoof	239DoomMetal

300 RYTHMS

240DreamPop	241PassionateSamba	242Experimental	243ExperimentalJungle
244-257SWING	244FunkMetal	245GaragePunk	246jazzSwing
247Glitch	248GothMetal	249GothRock	250singleSwing
251Grindcore	252HairMetal	253 L.A. Punk	254NewWave
255HardcorePunk	256HardcoreRap	257House	258-2718BEATS
258blues8-beat	259Guitar8Beat	2608BearPop	261Modern8Beat
262HeavyMetal8-beat	263Madchester	264Merseybeat	265PoliticalFolk
266Hiphop	267ProgressiveHouse	268NewRomantic	269Mellow8Beat
270ProgressiveMetal	271Prato-Punk	272-285CHA-CHA	272NewYorkPunk
273Psychedelic	274LiederChacha	275IndiePop	276Rap-Metal
277PoliticalReggae	278BrazilChacha	279Rave	280hardChacha
281SpeedMetal	282ModernChacha	283SunshinePop	284SwedishPop
285EPBALLAD1	286-299SALSA	286StonerMetal	287PowerMetal
288EastCoastRap	289softSalsa	290SlowBallad	291JazzCombo2
292JazzCombo3	293RootsReggae	294SLOW16BEAT	29516BeatShuffle2
296LiederSalsa	297Caucasian	298FastGospel	299Slowgospel

30 DEMOS


00 99 Sunny Days	01 Bu Bu Gao	02 Grandma's Penghu Bay	03 Country Road
04 In The Field of Hope	05 Love Song	06 A Beautiful Grassland is my home	07 Jasmine Flower
08 For Who	09 Little Apple	10 Doll	11 Rhythm of The Rain
12 Red River Valley	13 Stormy Rain	14 Happy New Year	15 Prelude in G Major
16 Midnight Express	17 Prelude of Vera Roberts	18 City of Sky	19 Italy Polka
20 Classical Music Concert	21 Serenade-Haydn	22 The Swiss Music Box	23 Kathy Carle Etude
24 Variations on a theme of Mozart	25 Patrol	26 Garden of Palace	27 He Control the Whole World
28 State of Mind	29 To Alice		

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

 UK office: Ipswich

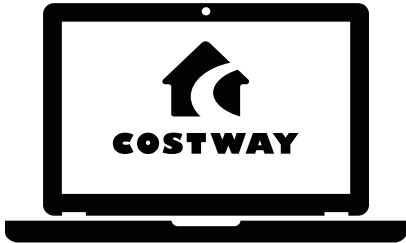

- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

