









USER'S MANUAL Treadmill

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com









Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully.

A Retain instructions for future reference.

↑ Seperate and count all parts and hardware.

A Read through each step carefully and follow the proper order.

Me recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, steady and stable surface.

⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Warning

Please talk to your doctor before you start an exercise program. Please be sure to consult your doctor or a professional before you start if you are over the age of 35 or not feeling well, and this is your first time fitness exercises. Please follow the instructions to install and use this product


Safety instructions

Many safety questions had been considered in the design and manufacture of this product, but please follow the instructions below just in case. We do not accept any consequences arising from abnormal operations.

To ensure your safety and avoid accidents, please read the instructions carefully before using.

- 1.Please consider your physical condition and properly and regularly train to ensure that you have enough physical strength for training when starting training with this product. Mistakes or excessive training will not benefit our health.
- 2. This product is not suitable for children. Do not use if you feel unwell physically or mentally unless they are under the supervision or direction of a person responsible for their safety regarding the use of the product. Children should be monitored to make sure they do not play with equipment.
- 3. This product is suitable for family use, is not suitable for professional training and testing, and cannot be used for medical purposes.
- 4. The heart rate display site of this product provides clinical date.
- 5. If the power cod is damaged, it must be replaced by the manufacturer or professional maintenance personnel to avoid danger.
- 6. Please check all parts before use to ensure that screws and nuts are locked.
- 7.Please wear comfortable tight clothes to avoid the clothes being hung by the machine. Don't let children or pets play around in case of accidents.
- 8.Please put the product on a smooth, clean and flat ground. Make sure there is no sharp objects nearby. Keep away from water and heat sources.
- 9. Keep your hands away from all moving parts. Do not put your hands and feet in the gap under the running belt.
- 10. This product is only for one person at run time.
- 11. Make sure screws and bolts are tightened after assembly
- 13. This product is HC grade, with a maximum weight of 110 KG.
- 14. There should be at least a 1000X2000mm safe area behind the treadmill when in use.

Assembly instructions

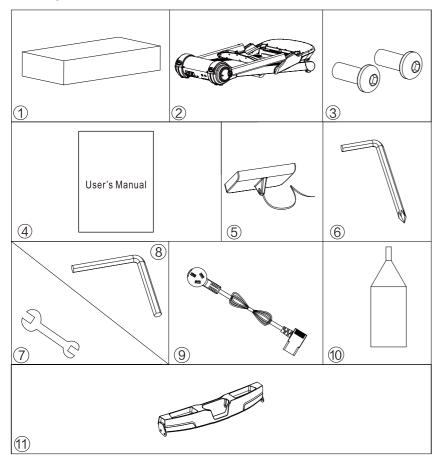


Spare parts list:

No.	Item Name	specification	Qty.	No.	Item Name	specification	Qty.
01	Whole Carton Box	1640*815*315mm	1	07	open-ended wrench 13# 14#		1
02	Treadmill		1	08	6# hex wrench		1
03	Hex socket button head screws	M8*20 Full Teeth	2	09	Power Cable		1
04	User's Manual		1	10	Silicone Oil	50ml	1
05	Safety Key		1	11	Multifunction Bracket	Multifunction	1
06	5#hex wrench		1	12			1


Assembly Tools:

5#hex wrench Notice: Please do not make it in power before finishing installment


Assembly Steps

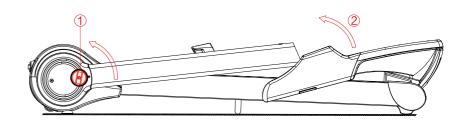


Step 1:First screw the left and right knobs of the column to the unlocked position ①, then put the electronic watch match the riser like ② . as shown in the figure 1.

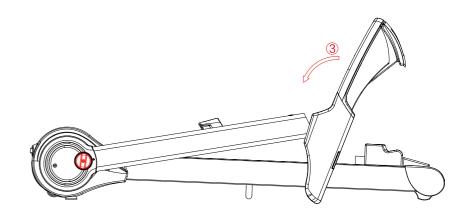


Step 2: Make the riser and electronic watch totally matched like \Im . Please do not fold the cable inside the riser as shown in the figure 2.

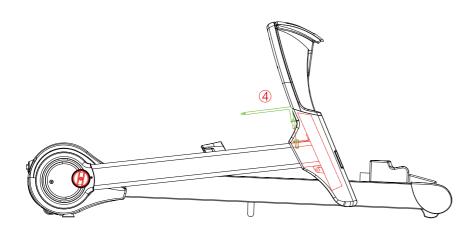


Step 3: Use a 5# hex wrench and M8*20 flat-head screws to securely lock the electronic watch as shown in the figure 3.

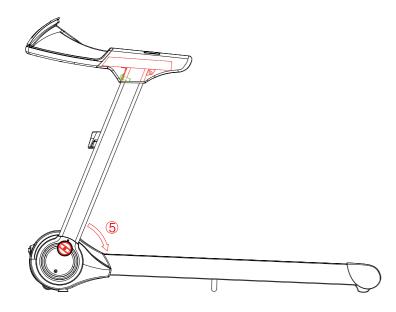

Step 4: When locked the electronic watch, Put up the left and right riser to the limit position. Then we can twist the knobs to lock the treadmill.

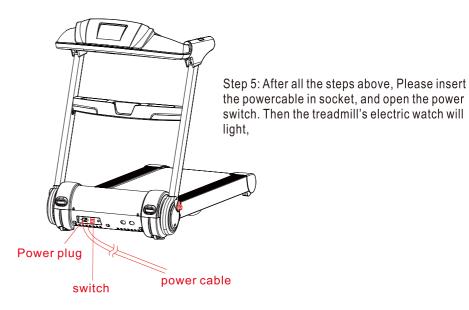






Single function

Console display Heart rate sensor Speed control knob Safety key position

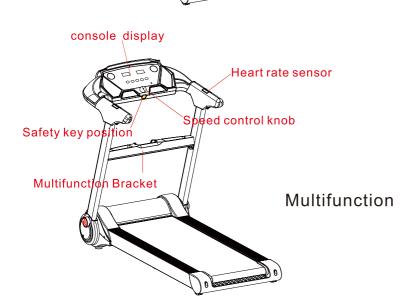

Please note: Confirm that all operations are completed as described above turn on the power before. Please refer to the following instructions for the operation of the treadmill.

Technical parameter

Carton Box size(inch)	64.5*32*12.4	Voltage	AC-110V 60Hz	
Product Size(inch)	60.4*29.8*46.7	Peak Motor Power	2.25HP	
Running Area(inch)	16.5*47.6	Speed Range	1.0-14KM/H	
Net Weight	105.8lbs	Max User Weight	264.5lbs	
Display	Speed/Time/Distance/Calorie/Heart Rate/Step			

Our Company reserves the right to make technical improvements. Subject to change without notice.

Grounding instructions

This product must be grounded. In the event of a fault or damage, grounding provides an optimal way to shunt current to reduce the risk of electric shock. This product is equipped with a power cord, a grounding conductor, and a grounding plug. The plug must be connected to the correct power outlet and the installation and grounding must be consistent with the parameters of the user's area of use.

Warning: Incorrect connection of the grounding conductor can result in electric shock. If you are unable to confirm that the product is properly grounded, please arrange for a qualified electrician or after-sales personnel to check. If the plug does not match the outlet, do not modify the plug yourself. Choose a correct outlet and have a qualified electrician install it.

Digital Tube Windows Display Instructions



Windows and Keys Instructions:

- 1. "TIME" "STEP" "SPEED" window: Displays time/step/speed values
- 2. "DISTANCE" "HEART RATE" "CALORIES" window: Displays distance/heart rate/calorie values. When something is wrong, this window will display the corresponding error prompt code.
- 3. "START/STOP": START/STOP keys, START the treadmill in stopping state, STOP the treadmill in running state.
- 4. Speed Increment Key, In the state of stopping or measuring fat is the key of setting parameters; in the state of running is the key of speed increment;
- 5. Speed Decrement Key, In the state of stopping or measuring fat is the key of setting parameters; in the state of running is the key of speed decrement;
- 6. "QUICK SPEED KEY": 5km/h and 8km/h quick speed key, in the running state of the treadmill, directly set the speed as the key to specify the value
- 7. Speed Control Knob: Acceleration clockwise, 0.5km/h per grid; deceleration by counterclockwise, 0.5km/h per grid.

Startup Instructions:

Operating instructions in manual normal mode:

- 1. Attach the safety key to the safety key position on the panel, turn on the power switch, and the buzzer will sound once. Then enter manual normal mode.
- 2. Press the Start button. The windows display: 3333 2222 1111, and each time the buzzer is sounded, the motor is started.
- 3. The starting speed is: 1.0KM/H. At this time, you can press the speed +, key, quick speed keys 5km/h, 8km/h to adjust the speed or turn the knob to switch acceleration and deceleration.
- 4. Heart rate test, hold the light hand grip with both hands, and have a heart rate display in heart rate window after a few seconds.

Safety Key function instructions

The safety key is composed of light touch switch, clothes clip and nylon rope. In any state, as long as the safety key is out of position, the treadmill stops running, the electronic meter keyboard is forbidden to operate. And the screen displays "E-07" with a prompt sound. After placing the security lock every time, the screen will display for w seconds, and then enter the system default working state.

MP3

It can be played by connecting the audio adapter wire with MP3 headphone jack and the audio input hole of the electronic meter.

Bluetooth Function

When connected with APP, The treadmill can be controlled by APP.

Data Display Range

	Start	Range
Time (Minutes:Second)	0:00	0:00-99:59
Speed (KM/h)	0.0	0.0-14.0
Step	0	0~9999
Distance (KM)	0.00	0.00-99.9
Calories (KC)	0.0	0.0-999
Heart Rate	0	50~200

Common failures and processing method

Please call our dealer or our after-sales service if you have any other questions

Questions	Possible causes	Maintenance methods	
	Not connected	Put plug to insert socket	
Treadmill	Power is not turned on	Put the power switch in position "NO"	
don't work	Safety lock drop	Put the safety lock in correct position	
	Circuit signal system break	Check the controller input terminal and signal circuit	
	The fuse blew out	Replace fuse	
The running belt	Insufficient lubrication	Add silicone oil lubricant	
doesn't run smoothly	Belt is too tight	Adjust belt tightness	
Running belt slipped	Running belt too loose	Adjust running belt tightness	
	Running belt too tight	Adjust running belt tightness	

Questions	Possible cause	Maintenance Methods	
E01	Poor communication	The signal line is not plugged it. Plug it again	
E02	Power assault	Power tube breakdown, replacement of electronic control	
E03	Non-sensing signal	Sensing wire is not plugged in properly. Plug it again correctly	
E04	Controller motor abnormal	Overload, replace controller or motor	
E05	Overload protect	Overload, replace controller	
E06	System self-check failed	System failure, replace controller	
E07	Safety lock drop	Put the safety lock in correct position	
abnormal display	External disturbance	Turn off power switch. Turn on it after one minute	

Sports advice and guidelines

warm-up exercise

warm up for 5-10mins before each operation

Breathe

Do not hold your breath during operation. Normally prepare to release action and inhale through the nose, exhale through the mouth. The breathing should be coordinated with movement. If the breathing is too rapid, the movement should be stopped immediately.

Frequency

The exercise of the same muscle should keep 48hours of rest. That is, only train the same area every other day.

Load

Determine the amount of training according to the individual physical condition, and then practice according to asymptotic load. It is normal phenomenon for muscle soreness at the beginning of training. As long as continue to practice the soreness can be eliminated.

Relax


The reductive action should be done for 5mins after practicing every time. Especially extend flabby for ministry muscle.avoid muscle long-term condensation, and keep muscle flexibility.

Diet

Do not eat at least 1 hour before training and half an hour after training to protect your digest system. Avoid drinking plenty of water to avoid increasing burden of heart andkidney.

Stretching exercise

It is important to stretch before training, no matter how intense the training will be. It is easier to stretch the muscles when they are warm. warm up by running for 5 to 10 minutes and then stop and stretch as follows 5 times for 10 seconds or more on each leg. continue to stretch even after training. Do it again after you work out.

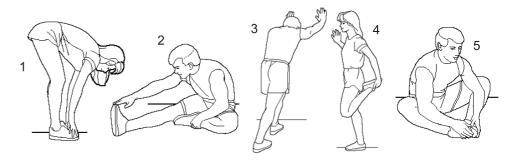

1. Stretch down

Bent your knees slightly and slowly bend your body to relax your back and shoulders. And try to touch your toes with your hands. Hold for 10-15 seconds, then relax. Repeat three times (see figure1)

2. Hamstring stretch

Sit on a clean seat cushion and straighten one leg. Bring the other leg in close to the inside of the leg. Try to touch your toes with your hands. Hold for 10-15 seconds, then relax. Repeat with each leg e times (see figure 2)

3. Stretch the calf and hamstring

Stand with two hands on a wall or tree. One foot is behind. Keep your hind legs straight and on your heels, leaning against a wall or tree. Hold for 10-15 seconds. And then relax.

Repeat 3 times for each leg (see figure 3)

4. Quadriceps stretch

Keep balance with left hand to hold the wall or table. Then extend your right hand backward. Hold your right ankle and slowly pulling toward your hips until you feel tension in front of your thighs muscles. Hold for 10-15 seconds, then relax. Repeat 3 times with each leg (see figure4)

5. Sartorius muscle (muscle of the inner thigh) stretch

Sit with your feet facing each other and knees facing out. Grab both feet with both hands and put toward the groin. Hold for 10-15 seconds. Then relax, repeat 3 times (see figure 5)

Product maintenance

1. lubrication

The running is used for a period of time, it must be lubricated with special methy silicone oil.

Advice:


★ 1 hour or less per week
 ★ Less than 3 hours per week
 ★ 3-6 hours per week
 ★ More than 6 hours per week
 Lubricate once every 2 months
 Lubricate once every 2 months
 Lubricate once every 1 month

Do not lubricate too much. It is not the more lubricants the better.

Remember: Proper lubrication is an important factor in improving the life of the treadmill.

2. As for the way to check if you need to add lubricant. Just grab the running belt and touch the middle of the running belt back with your hands as much as possible. You don't need to add lubricant if you have silicone on your hand (a little damp) You have to add lubricant if the pad is dry and there is no silicone on your hand.

- * the step of lubricate on the running plate (as shown right picture)
- * Stop running for and fold the machine.
- ★ Lift the running belt of the underside of the main body,Put the oil pot as far as possible into the middle of the running belt. And spray methyl silicone oil inside of the running and both sides.
- ★ You can make use of the treadmill speed of 1km/h to evenly lubricate and step on the running belt from left to right. After a few minutes, the methyl silicone oil can be completely absorbed by the running belt.

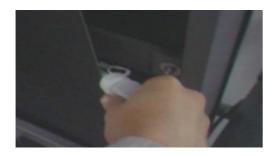


3. Adjust tightness of running belt, All treadmills shall be adjusted for tightness before delivery and after installation. However, the running belt may be loosened after a period of use. For example, The treadmill had stopping and slipping question during exercise. Adjust bolts of running belt with the left and right synchronous as per clockwise direction to half a circle as the unit when this phenomenon occurs. The feet will slip if the running belt is too loose. But it is not good to be too tight. It is easy to increase the load of the motor and damage the motor, running belt and roller etc.

4, Running belt deviation adjustment


All treadmills need to be adjusted the running belt before delivery and after installation. But the running belt may be deviated after a period of use which may be caused by the following reasons.

- 1 The main body is not placed smoothly.
- 2 The feet of users are not in the center of the running belt.
- 3 The feet of users are uneven force

It will be returned to normal after a few minutes of no-load rotation if deviation is caused by man-made. It should be adjusted with 6mm wrench at a half circle as the unit for deviation of non-recover automatically.



Please adjust left bolt with clockwise or right bolt with counterclockwise if running belt is left deviation.



Please adjust right bolt with clockwise or left bolt with counterclockwise if running belt is right deviation.



www.costway.com


The running belt deviation is not within the scope of warranty. And it is mainly maintained by the user according to the manual. Running belt deviation will seriously damage the running belt. The mistake must be found in time and corrected.

5. Adjustment of motor belt (as shown in the right picture)


All treadmills have been adjusted for the motor belt before and after installation, but they may still be out after a period of use. Now the phenomenon of loose slip, mainly by the user to adjust.

Adjustment steps:

- ① Adjust the parallelism of the motor with a wrenchTurn the bolt half a turn counterclockwise.
- ② Turn the belt tightening bolts clockwiseHalf a circle.
- NOTE: clean belt and pulley grooves regularly.

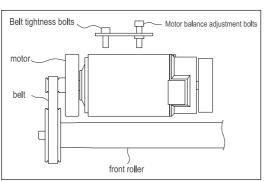

Explosion Diagram

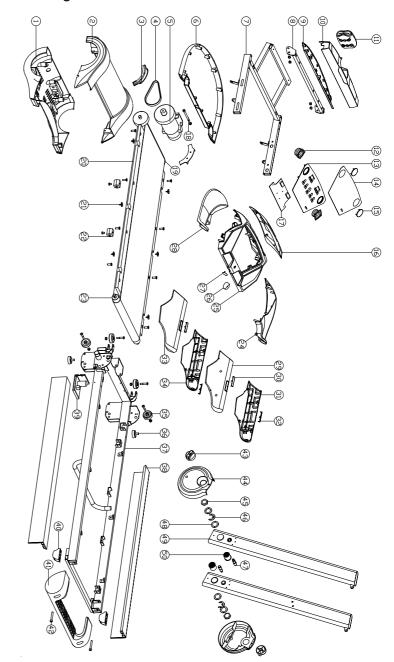

Explosion Diagram Chart

No.	Name	Quantity	No.	Name	Quantity
1	Upper Cover	1	30	Inner medial heartbeat Sensor	2
2	Bottom Cover	1	31	Right handle outer cover	1
3	Riser Bottom Case	2	32	outer medial heartbeat Sensor	2
4	Running Belt	1	33	Left handle outer cover	1
5	Motor	1	34	Left handle inner cover	1
6	Electric Watch Bottom Case	1	35	Moving wheel set	4
7	Electric Watch Welding Parts	1	36	Adjustable Footpad	2
8	Shelf Welding Parts	1	37	Main frame welding Parts	1
9	Shelf Lower Case	1	38	Edging Strip	2
10	Shelf Upper Case	1	39	Bottom Controller	1
11	Vibration Plate	1	40	Rear Footpad	2
12	Speaker	2	41	Rear tail cover	1
13	Digital Tube PCB fixed frame	1	42	Rear Roller Adjustable Screw	2
14	Digital Tube sticker	1	43	Knob	2
15	Speaker Net	2	44	Riser Lower Cover	2
16	Electronic watch hood	1	45	Hex thin nut	2
17	Digital tube PCB board	1	46	E-shaped gasket	2
18	Hexagon bolt set	1	47	Foldable Screw Bolt	2
19	Front Roller	1	48	Bumping Gasket	2
20	Running Board	1	49	Riser	2
21	Edge Strip Group	6	50	Riser Support Rubber Sleeve	2
22	Diamond Cushion	4			
23	Rear Wheel	1			
24	Right Separation Cover	1			
25	Electronic Watch Upper Case	1			
26	Adjustable Knob	1			
27	Safety Key Iron Piece	1			
28	Left Separation Cover	1			
29	Right handle inner cover	1			

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating

We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

